



## Vandoit Operational Checklist

- Check under the hood for any loose connections or frayed wires (i.e. evidence of pests)
- Check tires for cracks or punctures and make sure they're inflated to the proper pressures
- Make sure the backup camera is operational and all brake, turn and hazard signals are working
- View the roof to make sure solar panels are clean and to inspect for any disconnected wiring or damage
- Check for cracks in sealant on the roof around the MaxxAir fan and/or air conditioner; apply a new layer of sealant as needed
- Open and close the awning, check for tears or holes
- Check the Vandoit battery terminal cables
- Check shore power plug and cord for damage
- Verify the Vandoit battery system can charge while the car is running
- Turn on inverter and test outlets by plugging devices in and turning them on
- Test the TV and make sure audio can be heard
- Check that all speakers or subwoofers are working in the stereo system
- Check for sun icon and incoming amperage on the solar monitor while van is parked in the sun or through the mobile app
- Check all interior and exterior lights
- Test MaxxAir fan
- Test air conditioner
- Test Espar heater. Make sure there is at least ¼ tank of fuel in the van beforehand
- Test the water system: fill the water supply can, turn on the pump, operate the sprayer and kitchen faucet. Inspect each connection for leaks.
- If you have a LIV bed, make sure the bed crank raises and lowers the bed evenly
- Check DO bed cargo buckles for loose bolts
- If you have a gear slide, check to make sure it extends, stops, and retracts properly
- Tighten all bolts in the aluminum extrusion and cabinets